How to auto-connect with PS-1206MF for printing.

Author: Longcent

(2007-1-4)

This FAQ is applied to the following models and Windows versions:

Edimax: PS-1206MF and PS-1206MFg only

Windows OS: 98SE / 2000 / XP

Printer: non all-in-one printers (non-multifunctional printers)

Introduction:

For sharing pringers linked to the PS-1206MF(g) automatically, user must add the MAC address of the PS-1206MF(g) into the "auto connect list" tab in our software, MFP Server Control Manager.

As a simple and general classification for printers, only two kinds of printers are availabe: Non-all-in-one printer and all-in-one printer. For Non-all-in-one printer, every PC is allowed to send the printer job at the same time ; however, for all-in-one printer, only one PC (PC-A) can send the print job after it gains control over the printer server manually; while the other PCs can not print until that PC (PC-A) release the control.

It sounds troublesome ane time-consuming. We will introduce how to overcome this drawback. We assume that you already install the shipping software successfully and there is a all-in-one printer, Samsung ML-2010 attached to the PS-1206MF(g) as Figure-1.

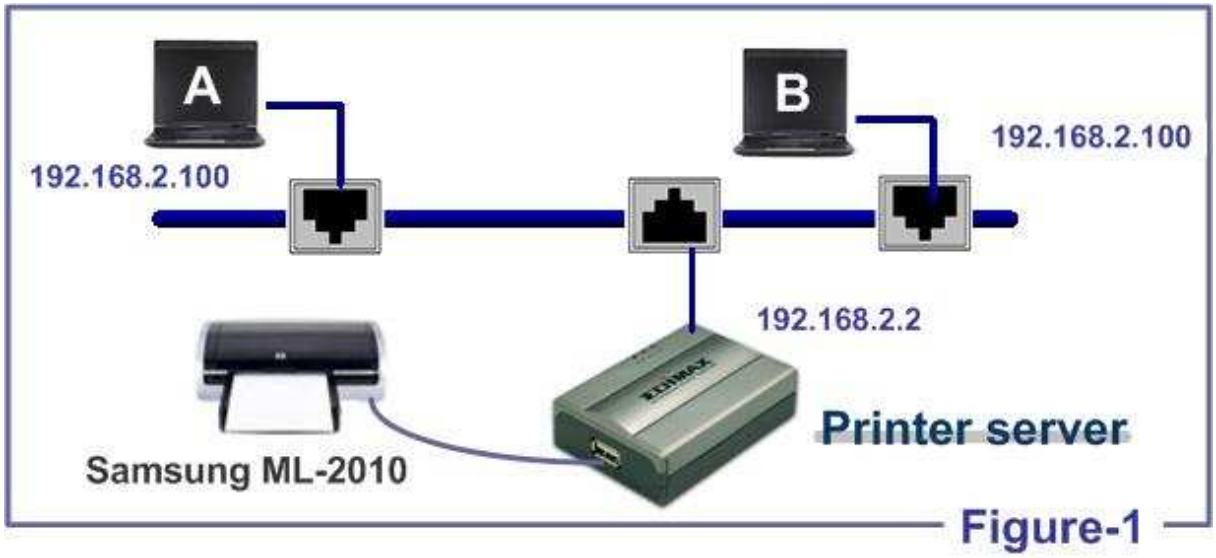

Figure-1

Step by Step:

Step 1 : Click the tab, "Auto connection List" as displayed in the Figure-2.

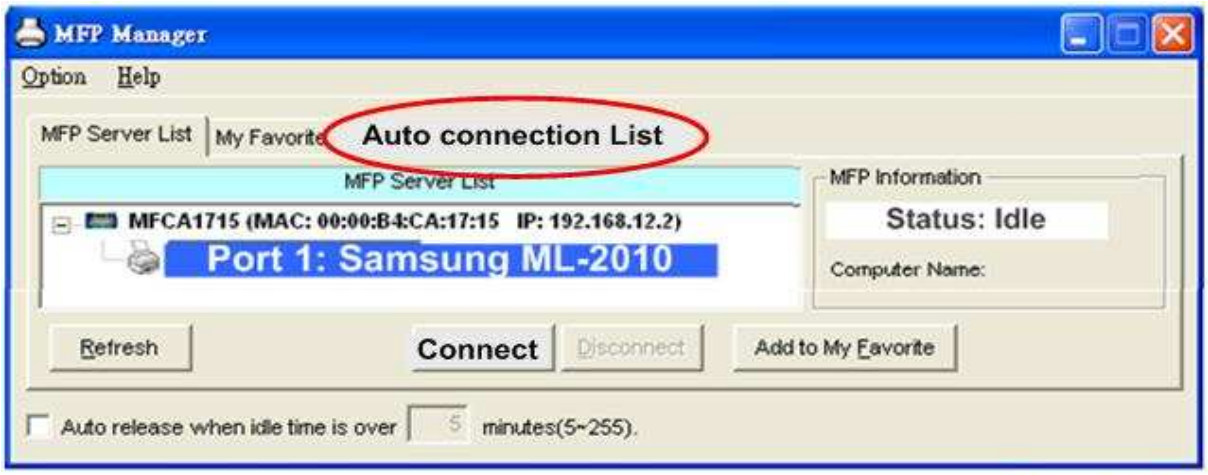

Figure-2

Step 2 : Click the "Add" as displayed in the Figure-3.

Figure-3

Step 3 : Click the "Samsung Queue" in the dorp-down menu (Figure-4). and click "ok" button.

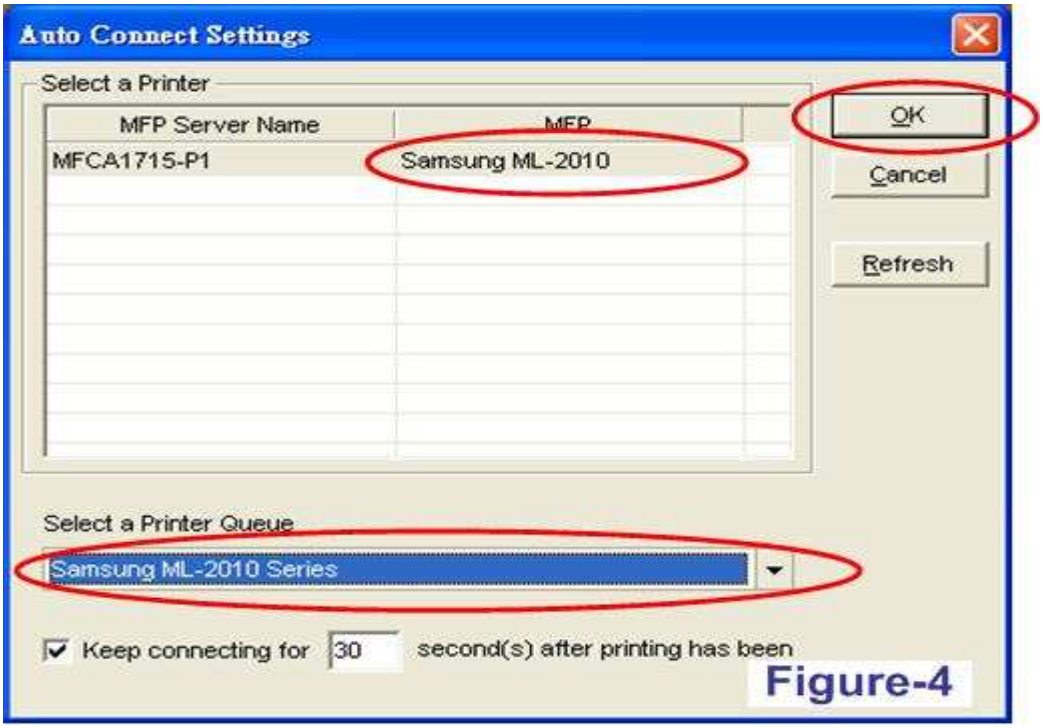

Figure-4

Step 4 : Click the “Auto release when idle time is over 5 minutes (Figure-5)

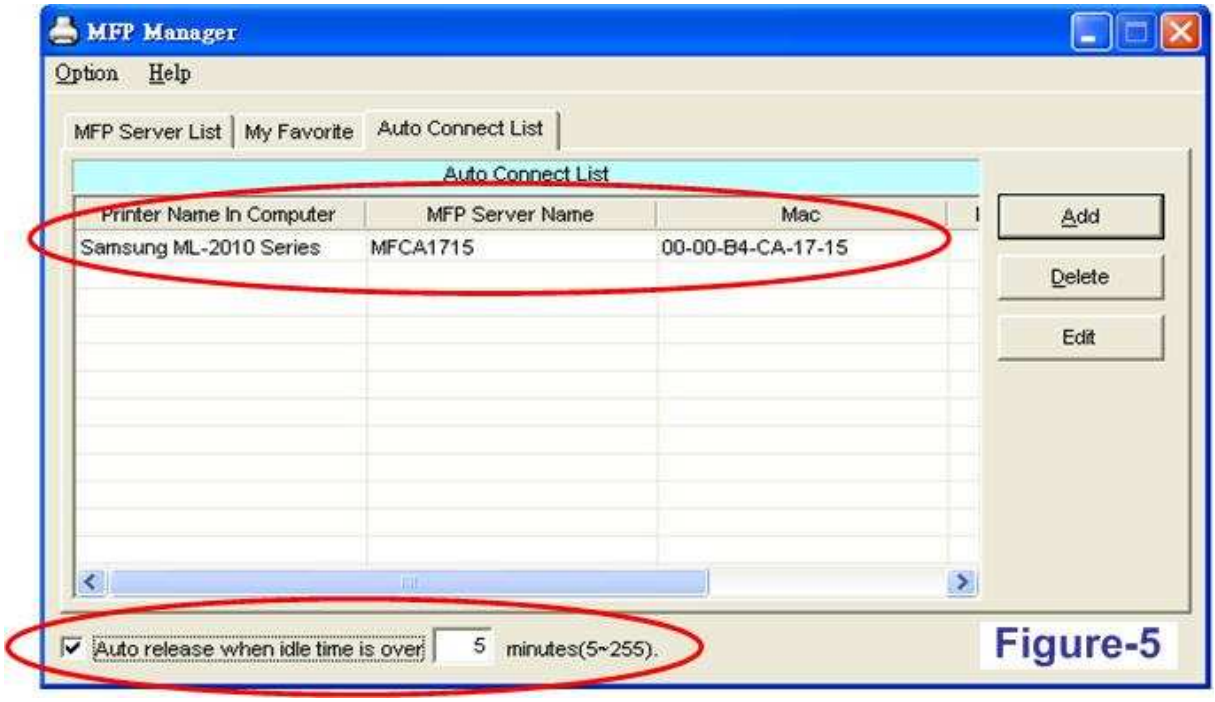

All configuration is complete. Please do the whole steps again in the PC-B. Now PC-A and PC-B can throw the print job automatically.